



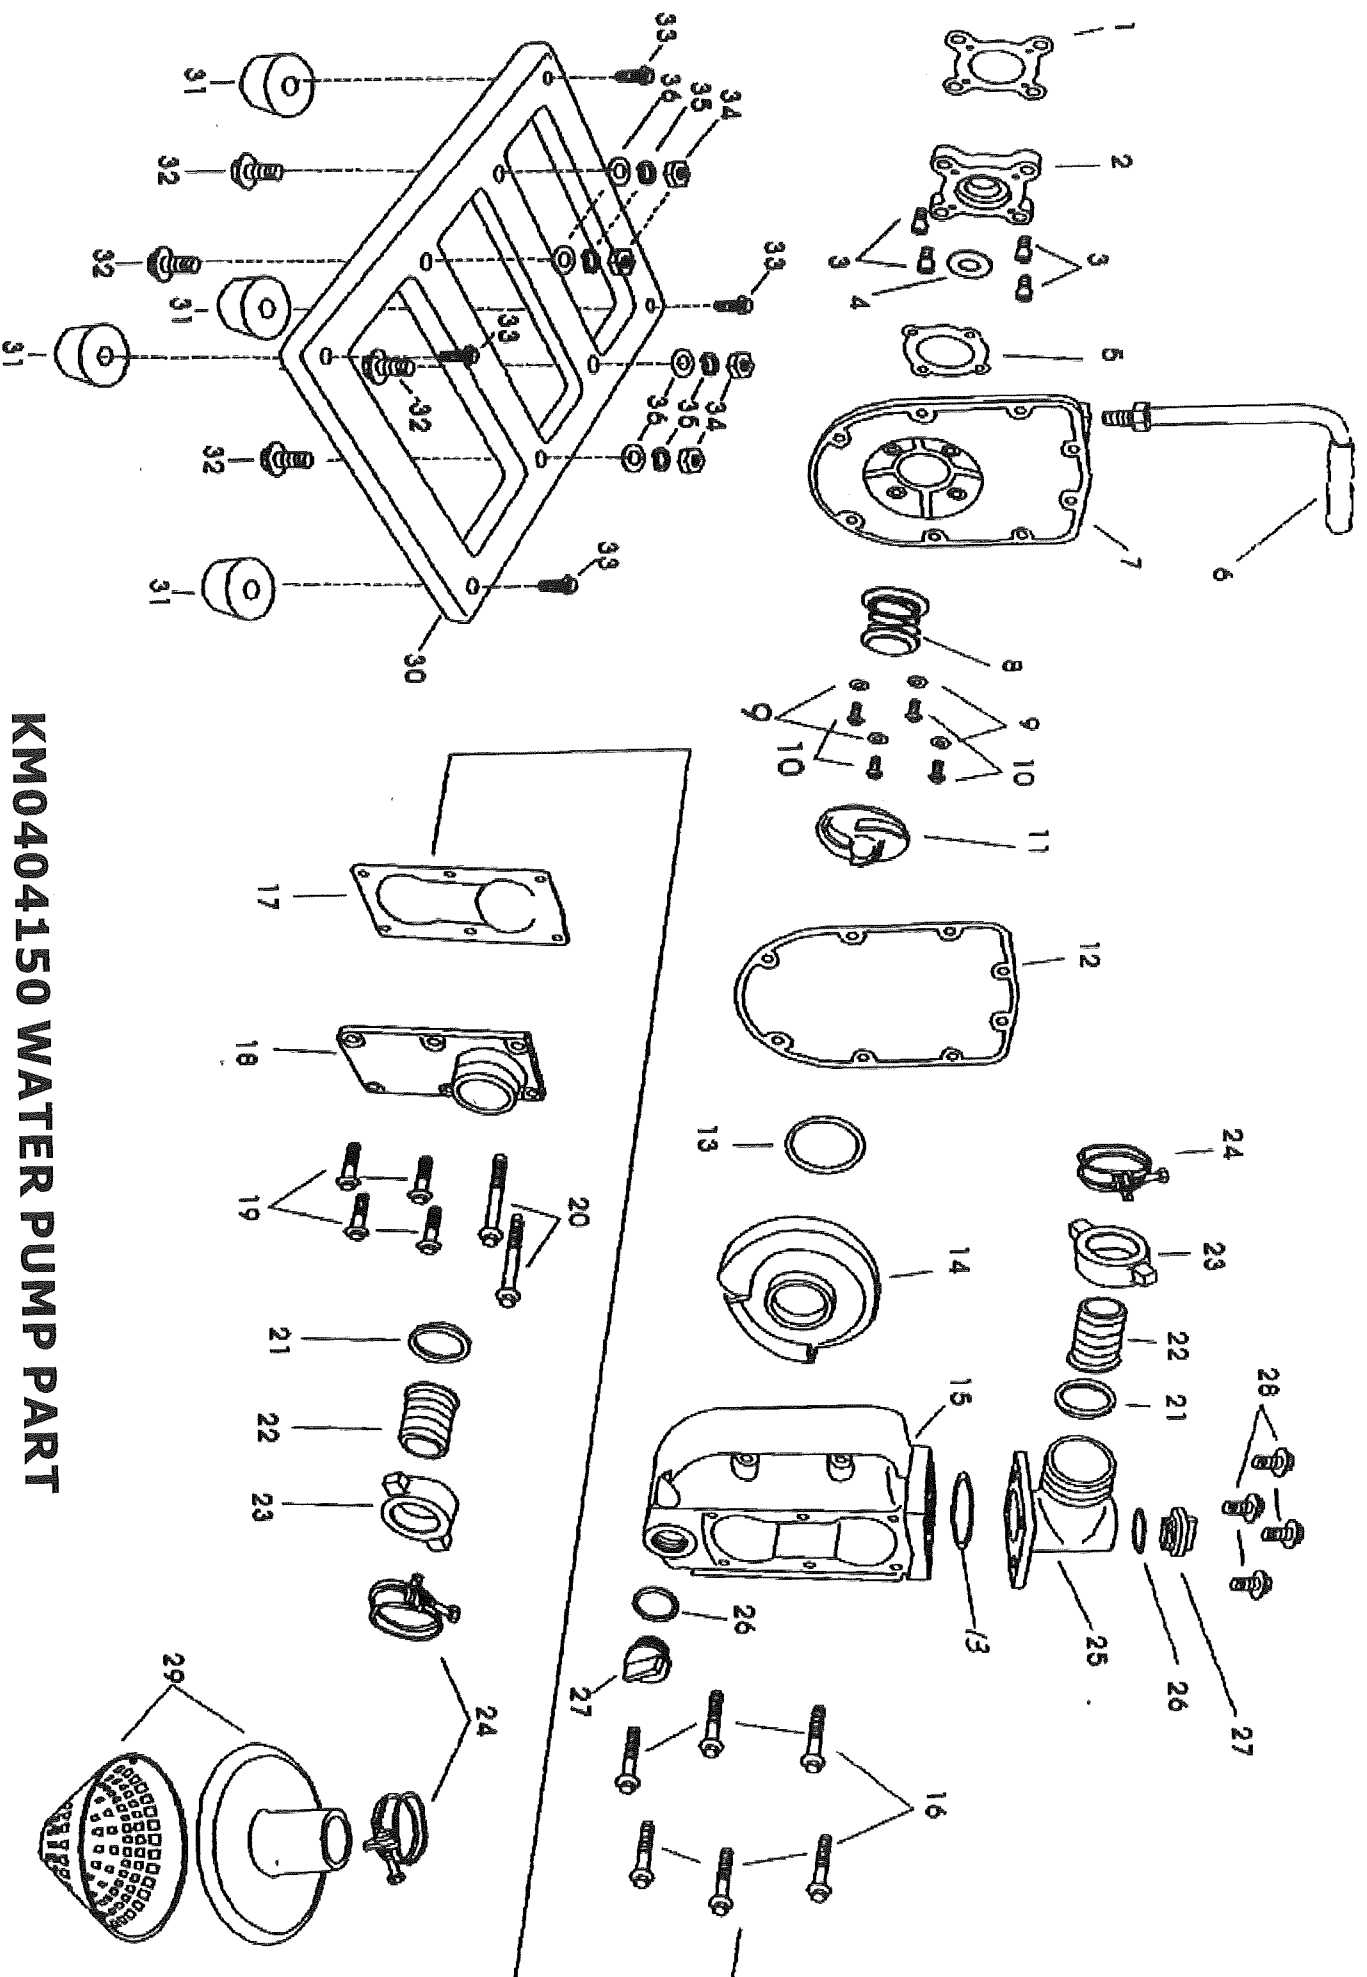

KM0404150 WATER PUMP PART


No	NAME	QTY	No.	NAME	QTY
	KH0404150P-1				
1	Gasket pump (paper) A	1	19	Bolt M6 x 16	4
2	Connecting board of pump	1	20	Bolt M6 x 85	2
3	Bolt M8 x 18	4	21	Rubber gasket, inlet and	2
4	KH0404150P-4 Washer Φ 10	1	22	KH0404150P-22 Inlet and outlet pipe	2
5	KH0404150P-5 Gasket pump (paper) B	1	23	KH0404150P-23 Flange nut inlet and outlet	2
6	Handrail	1	24	Hoop	3
7	KH0404150P-7 Bottom cover of pump	1	25	Upper pump body	1
8	KH0404150P-8 Seal	1	26	O-ring	2
9	KH0404150P-9 Washer Φ 6	4	27	Rubber plug	2
10	Bolt M6 x 20	4	28	Bolt M6 x 16	4
11	KH0404150P-11 Impeller	1	29	KH0404150P-29 Taper filter	1
12	KH0404150P-12 Packing pump body	1	30	Frame assy.	1
13	O-ring	2	31	KH0404150P-31 Bottom rubber	4
14	KH0404150P-14 Turbine	1	32	Bolt M8 x 14	4
15	KH0404150P-15 Pump body	1	33	Bolt M6 x 14	4
16	KH0404150P-16 Bolt M6 x 50	6	34	Nut M8	4
17	KH0404150P-17 Single-Direction Valve	1	35	Spring washer Φ 8	4
18	KH0404150P-18 Upper corner of pump	1	36	Washer Φ 8	4

152F 化油器总成 CARBURETOR ASSY

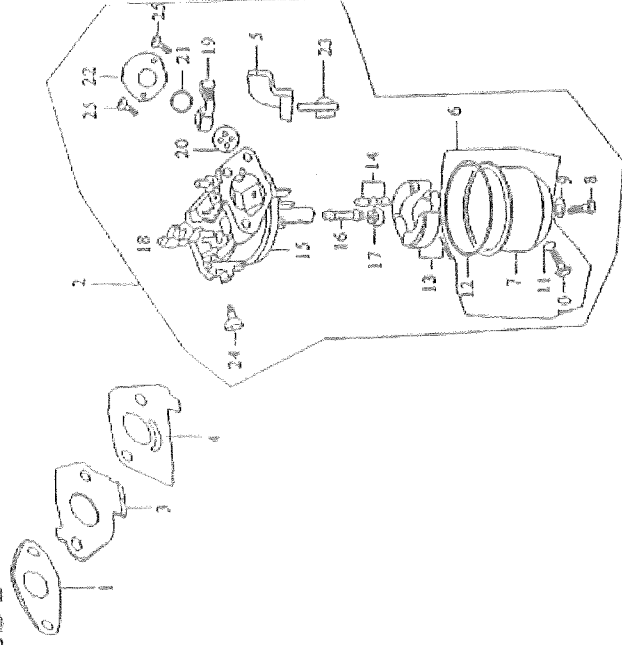


序 号 S/N	零部件代号 Part No.	零部件名称	Description	数 量 Quantity	备 注 Remark
14		浮子油针组合	Needle valve	1	
15		化油器混合室体	Mixture chamber body	1	
16		主喷油管	Main nozzle	1	
17		主喷油嘴	Main jet	1	
18		节气门组合	Throttle unit	1	
19		油门控制臂	Throttle lever	1	
20		油门控制臂密封垫	Airproof washer	1	
21		油门控制臂密封圈	Washer	1	
22		油门控制臂固定盖	Cover	1	
23		阴风门组合	Choke unit	1	
24		怠速调整螺钉	Idle adjusting screw	1	
25	GB5789-86	螺钉 M4×6	Screw M4×6	2	

152F 燃油箱总成 FUEL TANK ASSY

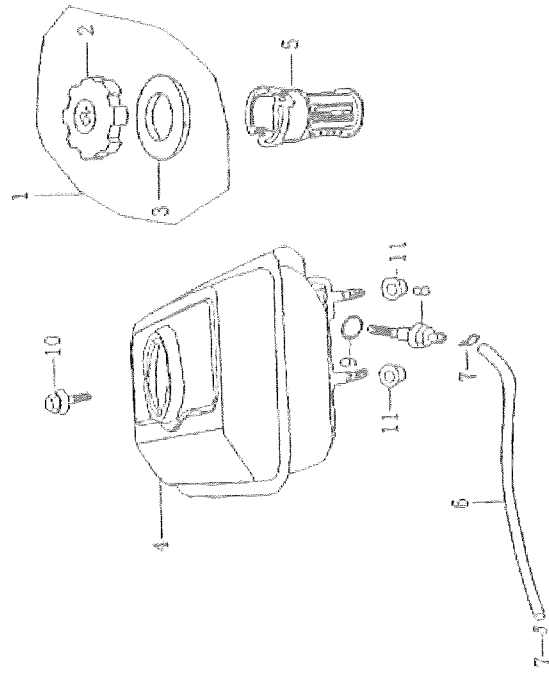


序 号 S/N	零部件代号 Part No.	零部件名称	Description	数 量 Quantity	备 注 Remark
1	10.0001	燃油箱盖组合	Fuel filler cap sub-assy	1	
2	10.0002	燃油箱盖	Fuel filler cap	1	
3	10.0003	燃油箱盖密封圈	Packing ring	1	
4	10.0004	燃油箱	Fuel tank	1	
5	10.0005	过滤杯	Filter cup	1	
6	10.0006	出油管	Outlet pipe	1	
7	10.0007	油管夹	Pipe clamp	2	
8	10.0008	出油接头	Outlet nipple	1	
9	10.0009	出油接头密封圈	Seal ring, outlet nipple	1	
10	GB5789-86	螺栓 M4x6	Bolt M4x6	1	
11	GB6177-86	螺栓 M6	Nut M6	2	

152F 空气滤清器总成 AIR CLEANER ASSY

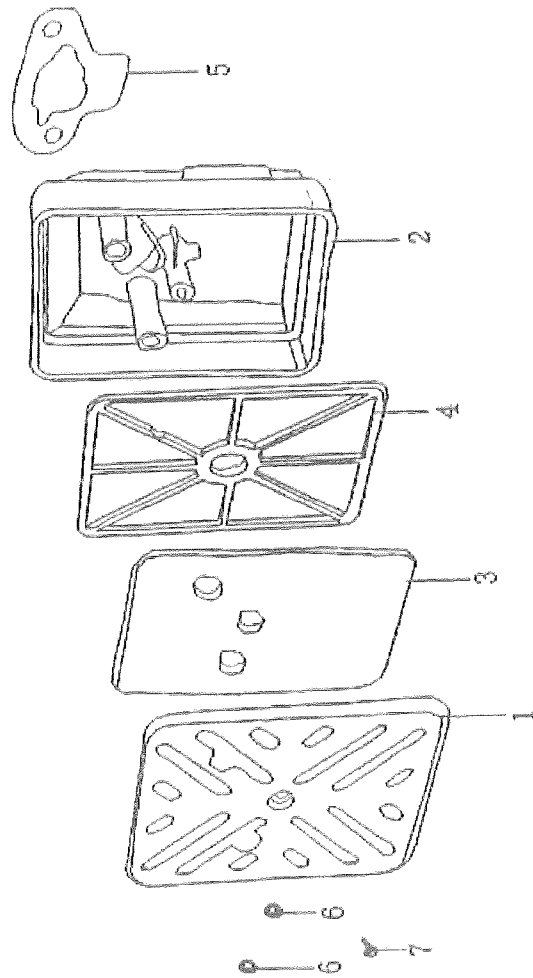


序 号 S/N	零部件代号 Part No.	零部件名称	Description	数 量 Quantity	备 注 Remark
1	07.0006	空滤器盖	Cover,air cleaner	1	
2	07.0007	空滤器座	Housing,air cleaner	1	
3	07.0008	空滤器泡沫	Foam,air cleaner	1	
4	07.0009	空滤器支架	Bracket,air cleaner	1	
5	07.0010	空滤器垫片	Gasket,air cleaner	1	
6	GB6177-86	螺母 M5	Nut M5	2	
7	GB/T845-1985	自攻螺钉 ST4×10	Self-tapping screw ST4×10	1	

152F 消声器组件 MUFFLER

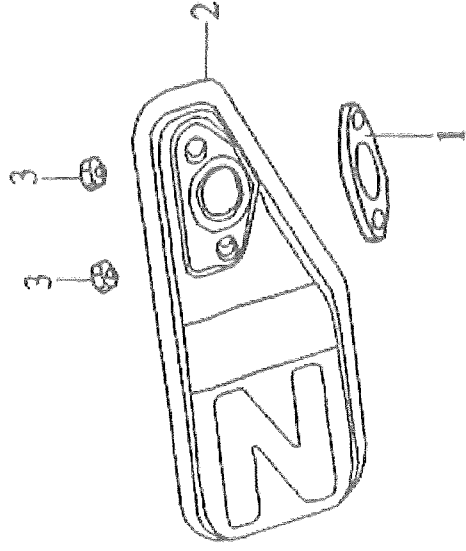


序 号 S/N	零 部 件 代 号 Part No.	零 部 件 名 称	Description	数 量 Quantity	备 注 Remark
1	09.0002	排气口垫片	Gasket, exhaust port	1	
2	09.0003	消声器	Exhaust muffler	1	
3	GB6177-86	螺母 M6	Nut M6	2	

152F 调速控制系统 GOVERNING CONTROL SYSTEM

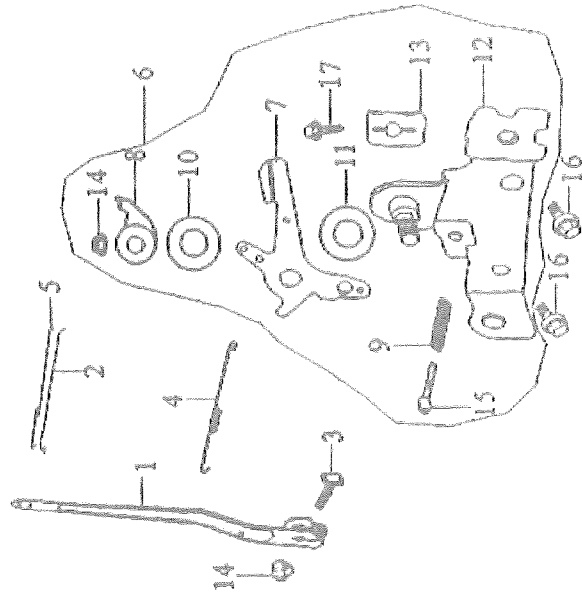


序号 S/N	零部件代号 Part No.	零部件名称	Description	数量 Quantity	备注 Remark
1	13.0001	调速臂	Governor arm	1	
2	13.0002	调速拉杆	Pull-rod, governor	1	
3	13.0003	调速臂紧固螺栓	Lock bolt	1	
4	13.0004	复位拉簧	Return spring	1	
5	13.0005	微调速弹簧	Assistant spring, governor	1	
6	13.0006	调速架部件	Mount, governor	1	
7	13.0007	手柄	Handle	1	
8	13.0008	定位板	Positioning plate	1	
9	13.0009	调速弹簧	Spring, governor	1	
10	13.0010	弹簧片	Wave washer	1	
11	13.0011	垫圈	Washer	1	

152F 反冲起动器部件 RECOIL STARTER

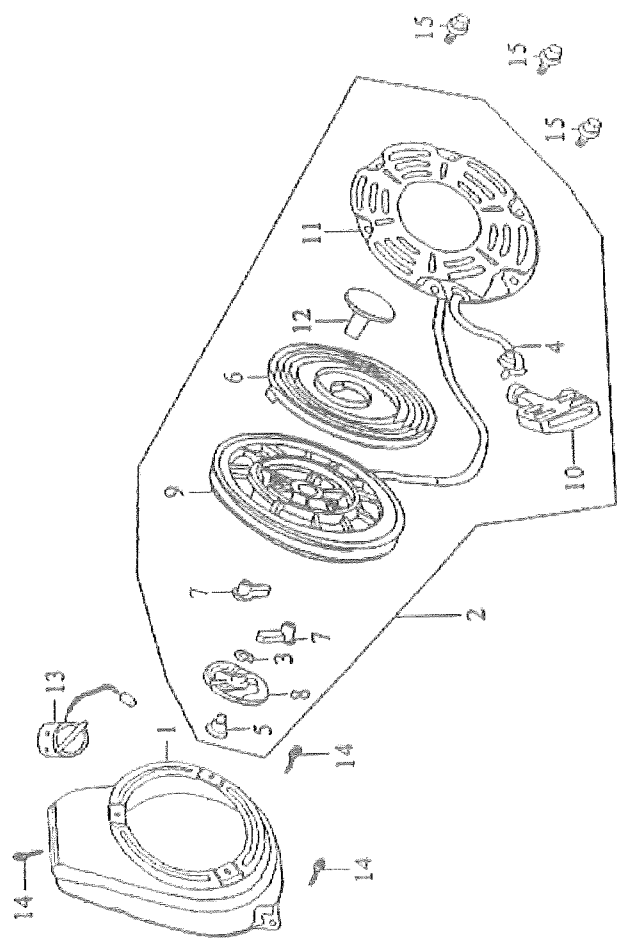


序号 S/N	零件代号 Part No.	零件名称	Description	数量 Quantity	备注 Remark
11	14.0014	点火开关	Engine switch	1	
12	GB5789-86	螺栓 M6×10	Bolt M6×10	3	
13	GB5789-86	螺栓 M6×14	Bolt M6×14	3	

152F 反冲起动器部件 RECOIL STARTER

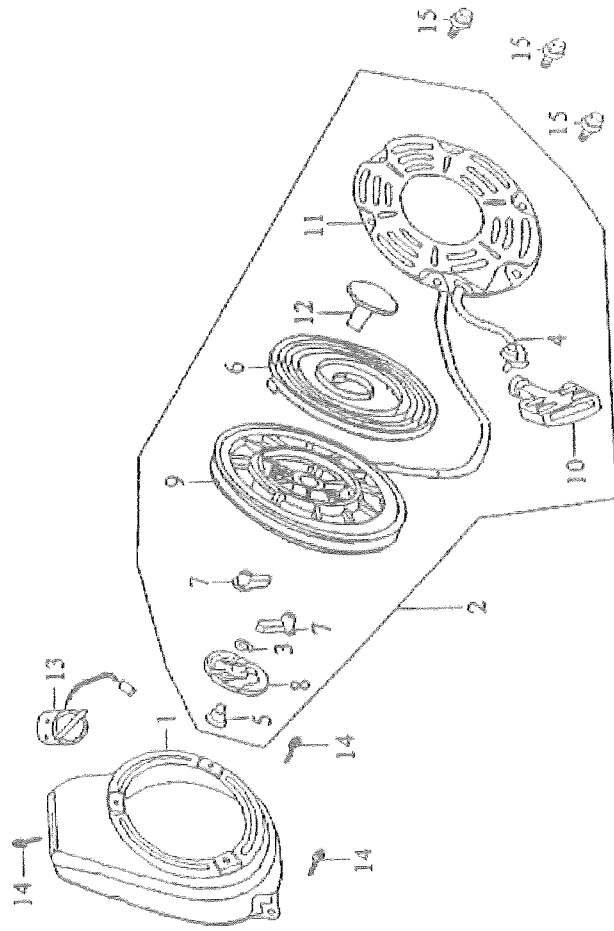


序号 S/N	零件代号 Part No.	零件名称	Description	数量 Quantity	备注 Remark
1	14.0002	风扇罩组件	Fan hood sub-assy	1	
2	14.0003	反冲起动器	Recoil starter	1	
3	14.0004	摩擦弹簧	Friction spring	1	
4	14.0005	拉绳	Rope	1	
5	14.0006	轴位螺钉	Shoulder screw	1	
6	14.0007	盘簧	Spiral spring	1	
7	14.0008	棘爪	Ratchet	2	
8	14.0009	弹簧盖	Lid, spring	1	
9	14.0010	起动器卷轮	Spool, starter	1	
10	14.0011	拉手	Grip, starter	1	
11	14.0012	外壳	Casing	1	
12	14.0013	弹簧座	Spring seal	1	

152F 调速控制系统 GOVERNING CONTROL SYSTEM

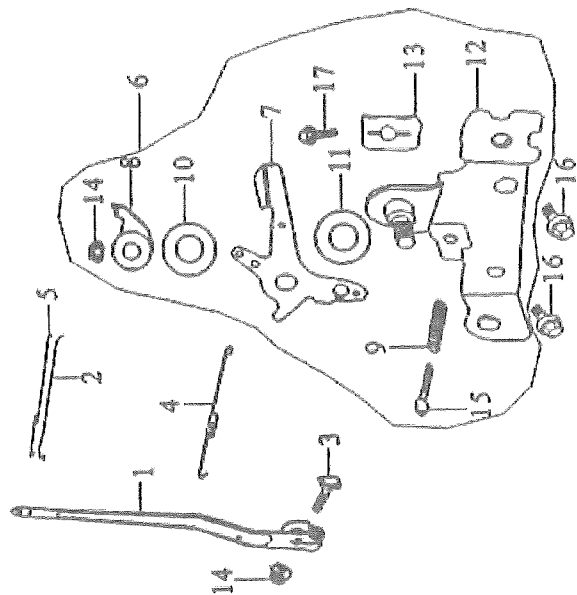


序 号 S/N	零 部 件 代 号 Part No.	零 部 件 名 称	Description	数 量 Quantity	备 注 Remark
12	13.0012	调速支撑板组件	Supporting plate unit	1	
13	13.0013	执行器压板	Pressure plate	1	
14	GB6177-86	螺母 M6	Nut M6	2	
15	GB818-85	螺栓 M5×25	Bolt M5×25	1	
16	GB5789-86	螺栓 M6×14	Bolt M6×14	2	
17	GB818-85	螺栓 M5×6	Bolt M5×6	1	

152F 飞轮部件 FLYWHEEL

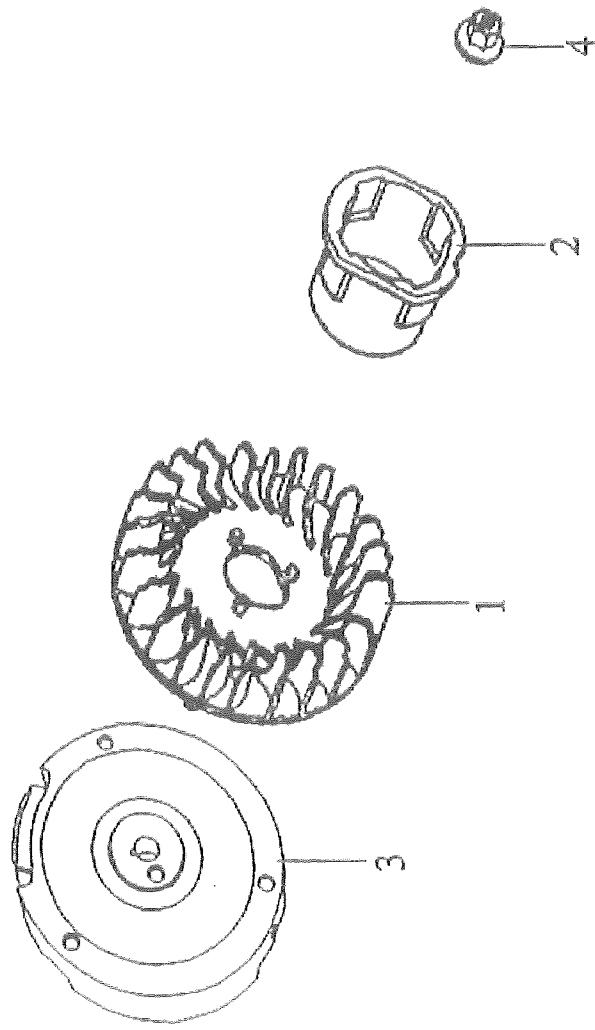

序号 S/N	零部件代号 Part No.	零部件名称	Description	数量 Quantity	备注 Remark
1	12.0001	飞轮风扇	Fan, flywheel	1	
2	12.0002	起动套	Starting flange	1	
3	12.0003	飞轮组件	Flywheel	1	
4	GB6177-86	飞轮螺母 M12x1.25	Nut M12x1.25	1	


152F 点火线圈组件 IGNITION COIL

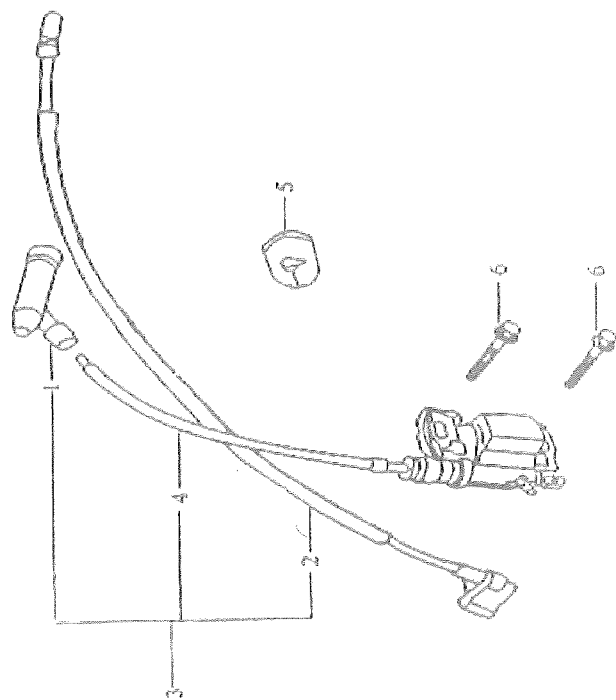

序号 S/N	零部件代号 Part No.	零部件名称	Description	数量 Quantity	备注 Remark
1	11.0001	火花塞帽	Cap, spark plug	1	
2	11.0002	熄火线	Cable, engine stop	1	
3	11.0003	点火线圈组件	Ignition coil sub-assy	1	
4	11.0004	点火线圈	Ignition coil	1	
5	11.0005	点火线圈衬套	Bush, ignition coil	1	
6	GB5789-86	螺栓 M6x25	Bolt M6x25	2	

152F 空气滤清器总成 AIR CLEANER ASSY

105741 A- CP

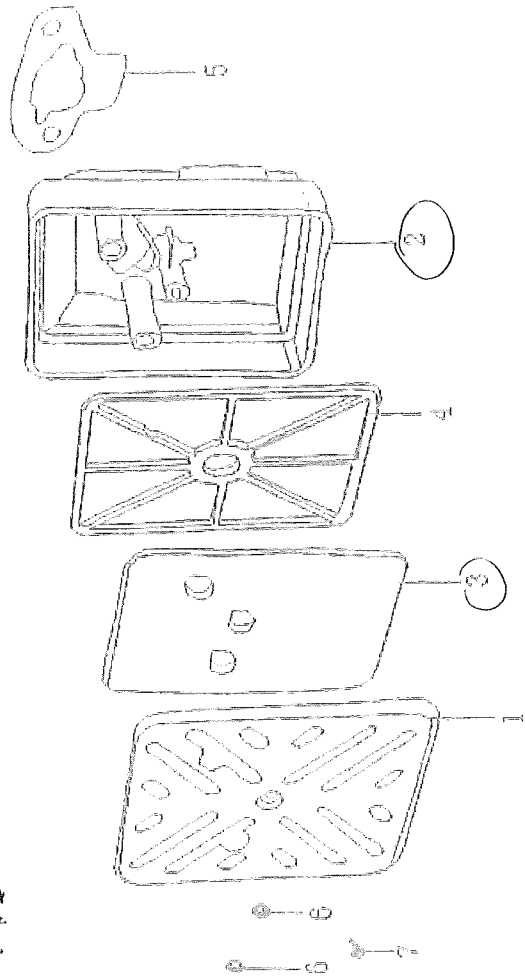

序号 S/N	零部件代号 Part No.	零部件名称	Description	数量 Quantity	备注 Remark
1	07.0006	空滤器盖	Cover, air cleaner	1	
2	07.0007	空滤器座	Housing, air cleaner	1	
3	07.0008	空滤器泡沫	Foam, air cleaner	1	
4	07.0009	空滤器支架	Bracket, air cleaner	1	
5	07.0010	空滤器垫片	Gasket, air cleaner	1	
6	GB6177-86	螺母 M5	Nut M5	2	
7	GB/T845-1985	自攻螺钉 ST4x10	Self-tapping screw ST4x10	1	